 
 


How to Replace the Helical Blade Assembly


1.Pull out the shavings bin.

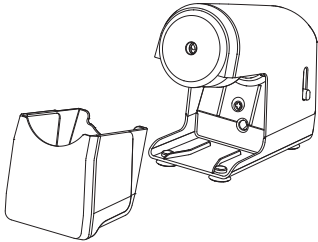


2.Pull out the circular cover in the direction of the arrow.

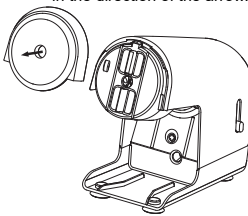


3.Twist the circular component in the direction indicated by the arrow to unscrew it.

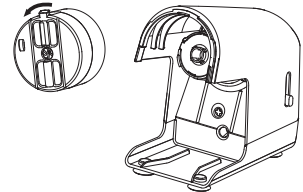


4.Pull out the helical blade cover in the shape of a ring

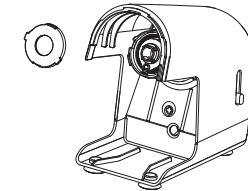

5.Pull out the helical blade.

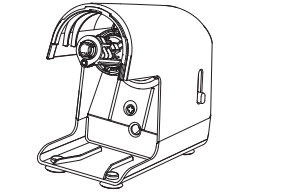

6.Replace with new helical blade and reinstall the blade cover, circular component, cover and shavings bin.

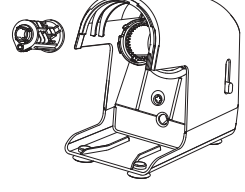

5

heutink.
AUTOMATIC
PENCIL
SHARPENER USER MANUAL



AUTOFEED &
AUTOEJECT



ADJUSTABLE
PEN TIP




POLISHING
FOR SMOOTH NIB



REPLACEABLE
HELICAL BLADE



AUTOMATICALLY
EJECT BROKEN LEAD

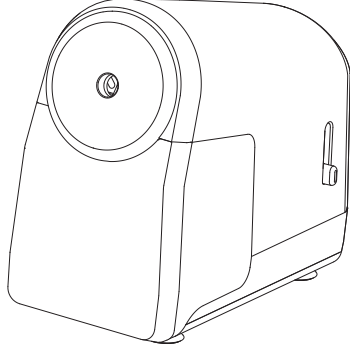

Product Features

- Automatic pencil insertion and ejection.
- Fast sharpening. Automatically stops after sharpening and ejecting the pencil.
- Automatically removes broken leads.
- Adjustable nib sharpness.
- Replaceable helical blade.
- Large-capacity shavings bin with sealed lead dust containment for easy and clean disposal.

Technical Specifications

1.Product Name: Automatic Electric Pencil Sharpener

2.Model:


3.Power Adapter: 9VDC1A


4.Fit Pencil Diameter: 7-11.5 mm

5.Dimensions: 202 x 104 x 180 mm

6.Weight: 1.17 kg

Parts Identification

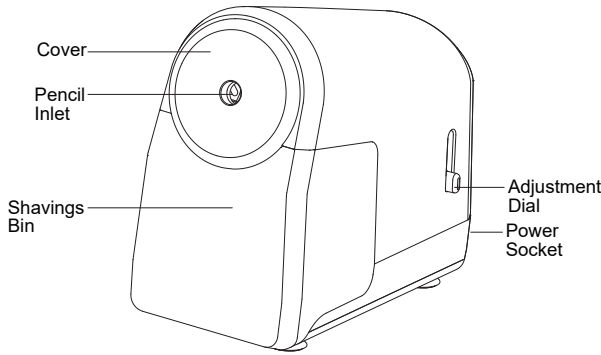

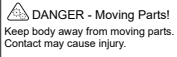

1

Warnings

- It is recommended to use the original adapter to ensure sufficient power and product stability.
- Suitable for wood-cased graphite pencils and colored pencils with a diameter of 7-11.5mm.
- Minimum Pencil Length: 7cm. Do not use pencils shorter than 7cm, otherwise the pencil will get stuck in the blade assembly and cannot be ejected.
- NOT suitable for sharpening chalk, crayons, or charcoal pencils.
- Do not use alcohol or other irritating liquids to clean the unit.
- For your safety, disconnect the power adapter before emptying the shavings bin.
- Children must use under adult supervision. Avoid inserting fingers into the pencil inlet.
- NEVER wash this product with water.

Operating Instructions

- Connect the power plug to the sharpener to operate the product normally.
- Insert the pencil to activate the sharpening function.
- Once sharpened, the pencil will automatically eject; then remove it.
- To sharpen pencils to different tip thicknesses, adjust the side dial to your desired setting as indicated.
- The shavings bin must be pushed all the way in to press down the safety switch—if not fully inserted, the contacts won't engage and the machine will not start.

How to Adjust Point Sharpness

Turn the dial to Position I : Point size approx. 0.6 mm

Turn the dial to Position II : Point size approx. 1.0 mm

Turn the dial to Position III : Point size approx. 1.5 mm


Turn the dial to Position IV : Point size approx. 1.8 mm

(Position IV cannot sharpen thin pencils)

2

Emptying the Shavings Bin

- Safety first: Always disconnect the power adapter before emptying shavings.
- Simply pull out the shavings bin, empty the contents, and reinsert it fully into place.
- We recommend emptying the shavings bin when it's about 2/3 full for best performance.

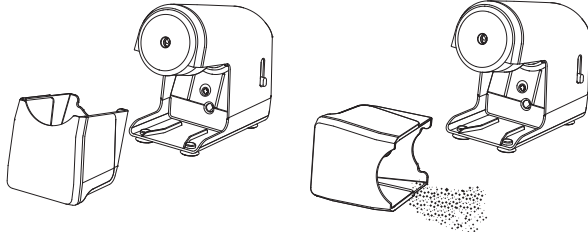

Trouble Shooting

If a pencil shorter than 7cm jams in the blade assembly and fails to auto-eject:

1.Unplug the sharpener immediately

2.Follow steps 1-3 of the Blade Replacement Procedure

3.Carefully remove the stuck pencil

4.Reassemble all components to resume normal operation

3